

areco



Installation of concealed trim


Installation instructions for concealed trim

1. Pre-drilling

Drill Ø 27 mm holes for countersunk washers (hole centre 35 mm from the panel edge).

Remove the standard seal from the fasteners so that the screw head can be countersunk in the washer.

Be careful: the drill bit can jam suddenly in the sheet metal.

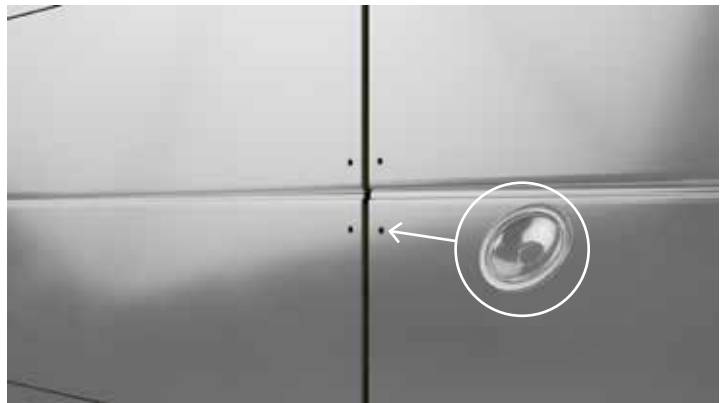


2. Fixing and alignment

Tighten the screws so that the countersunk washer sits flush with the surface.

Apply sealant to the horizontal joint across the width of the vertical trim and mark the line for the joint tape.

Important: check that the horizontal joints are aligned on both sides of the column.

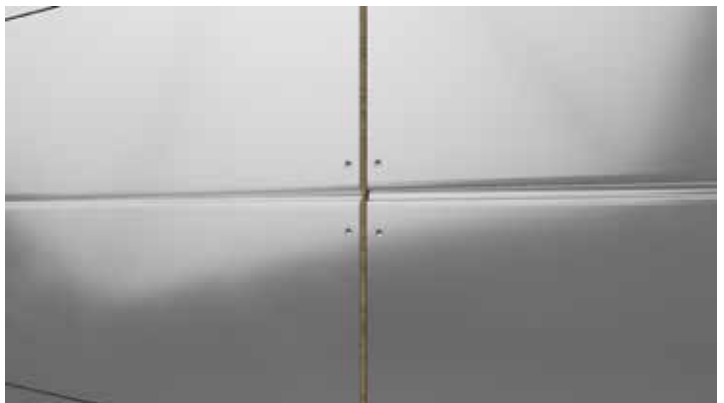

3. Joint tape

Apply the tape to a clean, dry surface and press it firmly into place.

In winter: store the tape in a warm place and, if necessary, use a hot air gun to warm it.





4. Support strips

Secure the support strips in the pre-drilled holes.

Align the strip vertically with the centre of the panel.



5. Installing the cover strip

Slide the cover strip into place from the top (start with the lowest panel).

Lock the strip into place by fastening it at the top corner.

Areco Profiles is one of the leading manufacturers of steel sheet for construction.

We offer the construction industry a comprehensive range of facade and roof products with flexible delivery times and a wide choice of colours.

We have five factories in four countries.

Contact your local sales representative for more information.

areco